

# PTM125-S BBP125-S | 15" Flexible Steel Gooseneck Mount



CM088-TS-2 15" Flexible Steel "Gooseneck" Mount  
(shown with Seat Bolt Bracket attached)



CC002-Palm



CC003-BBP

## Compatibility: (not complete)

- |                  |                |                   |
|------------------|----------------|-------------------|
| - Palm Treo 650  | - HP iPAQ 6815 | - XDA Adom Exec   |
| - Palm Treo 680  | - HP iPAQ 6818 | - Dopod 818 Pro   |
| - Palm Treo 700W | - HP iPAQ 6828 | - Dopod 810       |
| - Palm Treo 700P | - HTC P3600    | - Pharos GPS 525P |
| - Palm Treo 750  | - HTC 6815     | - i-Mate JAMin    |

## Compatibility:

Blackberry Pearl 8100

## Package Contents:

- (1) Seat Bolt Bracket
- (1) Floor / Console Bracket
- (1) Flexible Steel Shaft with Plastic Tubing
- (1) Dual T Pattern Head
- (3) Screws
- (4) Plastic Caps
- (1) Custom Cradle (CC002-Palm or CC003-BBP)

## NOTES:


1. Tool for Seat Bolt mounting - socket wrench
2. Tools for optional Floor or Console mounting - drill and screwdriver
3. Do not twist the cradle or device while mounted on top of the pedestal to adjust the steel shaft as this can break the dual T grooves.

## Installation Instructions

### Passenger Seat Bolt Mounting

For a simple mount that can be easily moved to another vehicle, install using the passenger seat bolt (no drilling required).

- Step 1. Screw the flexible steel shaft into the Seat Bolt Bracket.

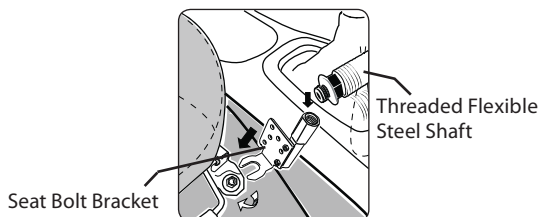

- Step 2. With a socket wrench, loosen the passenger seat bolt, insert the Seat Bolt Bracket, and retighten the seat bolt.




## Safety Precautions

Drilling onto the floor or console can permanently damage the vehicle. Use caution and consult a mobile install professional to avoid drilling into the gas tank, electrical system or other highly sensitive vehicle components.

Arkon Resources, Inc. is not responsible for any damages caused to your car or yourself due to the install of the pedestal mount.

## Floor or Console Mounting


For a more permanent mount, connect the Floor / Console Mount Bracket to the floor or console. This will require drilling into your vehicle's interior surface.

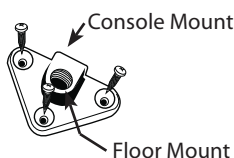

- Step 1. Position the Floor / Console Bracket and drill into the floor or console.


- Step 2. Attach the Floor / Console Bracket with screws and cover with plastic caps.

- Step 3. Screw the steel shaft into the Floor / Console Bracket.

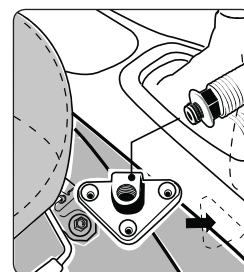


## Pedestal Head Adjustments

- Step 1. Adjust the steel shaft by bending with both hands to the desired location of the male dual T-head.
- Step 2. Use the adjustment knob (A) and wing nut (B) on the pedestal head to swivel or rotate the head position if necessary.
- Step 3. Align the female dual T-slots on the cradle to the dual T-tabs on the pedestal head. Insert device.

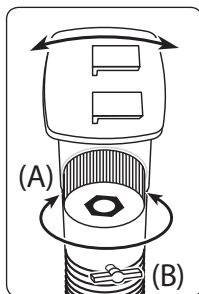

## Connecting the cradle

Slide the T-slots of the cradle onto the T-tabs of the mount head.

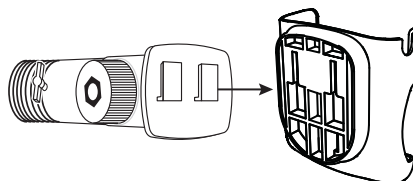

## Safety Precautions

Drilling onto the floor or console can permanently damage the vehicle. Use caution and consult a mobile install professional to avoid drilling into the gas tank, electrical system or other highly sensitive vehicle components.

Arkon Resources, Inc. is not responsible for any damages caused to your vehicle, your device, or yourself due to the installation or use of this product.

**ARKON**  
RESOURCES INC.

The Mobile Mounting Specialists™

Consumer Hotline:  
(USA) (800) 841-0884  
(INT'L) (626) 254-9005

Mon-Fri. 9am-5pm, PST

**www.arkon.com**  
Arcadia, CA 91006 USA  
Made in Taiwan

© Copyright 2007 Arkon Resources, Inc.